

MONSTER®

ROCKIN' ROLLER X
PORTABLE INDOOR/OUTDOOR WIRELESS SPEAKER



User Manual

MODEL: MNRRX

MONSTER ZONE CONTROL APP



Make changes to the settings of the speaker directly from your smartphone

INDEX

Warnings	2-3
Controls and Connections	4
User's General Instructions	5-7
LCD Display Navigation	8-14
Lighting Function	15
Specifications	15
Disputes	16
Warranty	17

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

UNPACKING

Check that you have all of the following items.

If any item is missing, please contact the customer service hotline for assistance.

The hotline number is printed on the cover page of this user manual.

- Monster RRX Speaker
- AC Power Cable
- Wired Microphone
- User Manual (with Warranty Statement)
- Quick Start Guide

IMPORTANT SAFETY INSTRUCTIONS

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOIST.



The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- 1. READ INSTRUCTIONS** - All the safety and operating instructions should be read before the product is operated.
- 2. RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained for future reference.
- 3. HEED WARNINGS** - All warnings on the product and in the operating instructions should be adhered to.
- 4. FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
- 5. CLEANING** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
- 6. ATTACHMENTS** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7. ACCESSORIES** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved care-quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
- 8. VENTILATION** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation, such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 9. POWER SOURCES** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 10. GROUNDING OR POLARIZATION** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature: If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 11. POWER-CORD PROTECTION** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point of exit from the product.
- 12. NON-USE PERIODS** - The power cord of the product should be unplugged from the outlet when left unused for long periods of time.
13. Do not use this apparatus near water.
14. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.



CONTROLS AND CONNECTIONS

 
Front view

1. Vol ± knob
2. Up key
3. Down key
4. PREV key
5. Next key
6. OK key
7. Back key
8. Home key
9. Lighting key / BASS BOOST Key
10. LCD display



Back view

1. USB player
2. Segment LED display
3. LED Indicator
4. Source button
5. BT button
6. Lighting button
7. TWS button
8. Previous button
9. Next button
10. Play/Pause button
11. Repeat button
12. Bass / Treble button
13. Bass button
14. Number buttons
15. Recorder Play / Battery button
16. Master volume knob
17. Mic Gain knob
18. Mic Echo knob
19. XLR OUT
20. 1/4" Input and XLR MIC IN 1
21. 1/4" Input and XLR MIC IN 2
22. 3.5mm Aux IN
23. XLR IN
24. AC IN
25. Power rocker switch

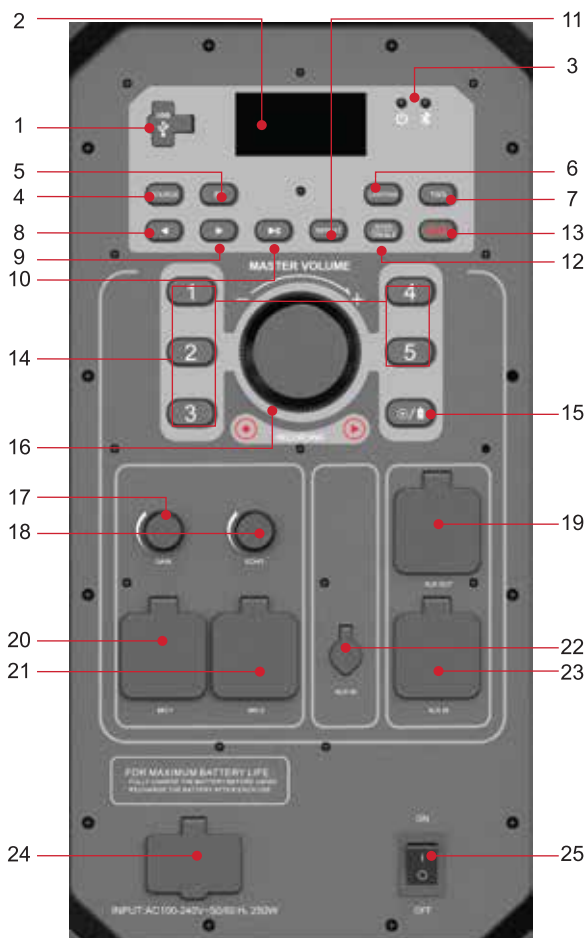

Segment LED display

26. Segment LED
27. Recording icon
28. USB audio source icon
29. AUX-IN source icon
30. FM radio icon
31. Bluetooth® source icon



Power ON/OFF Switch:

- Toggle switch to ON position:
 - Green power LED Indicator light and LED Display will power on.
 - The unit voice prompt will say, "Power on."
 - Automatically enters into Bluetooth® pairing status.
- Toggle the switch to OFF position, all the LED Indicators and other LED/LCD Displays will be turned off.

BT (Bluetooth®) Button:

- Switch to Bluetooth® Audio Source:
 - While in another audio source, press the BT Button to switch to Bluetooth® mode or cycle through audio sources using the source button.
 - The unit will automatically disconnect from the current device.
- Bluetooth® pair audio device:
 - Set unit source to Bluetooth®.
 - Long press BT Button for 2 seconds to enter into pairing status.
 - Select "MONSTER RRR" from your Bluetooth® enabled audio device.
 - The unit voice prompt will say, "Connected," when successfully paired.
 - The blue Bluetooth® indicator light will remain on.
 - If the signal moves out of range the blue Bluetooth® indicator light will blink and disconnect if the connection is not reestablished after 5 minutes.
- Disconnect Bluetooth® audio device connection:
 - Set unit source to Bluetooth®.
 - Long press BT Button for 2 seconds to enter into pairing status.
 - The unit voice prompt will say, "Disconnected."
 - The blue Bluetooth® LED Indicator light will begin to flash.
 - Unit will enter pairing status.

Play/Pause Button:

- Play/Pause Button works with Bluetooth® and USB audio sources:
 - While audio is playing, press the Play Button to pause playback.
 - While audio is paused, press the Play Button to resume playback.

Master Volume Knob:

- Increase overall volume in playback mode :
 - Default volume level is 10.
 - Rotate master volume knob clockwise. The power LED Indicator blinks when the max level of 32 is reached.
- Decrease overall volume in playback mode:
 - Rotate master volume knob counter-clockwise. The power LED Indicator blinks when the minimum volume level of 0 (mute) is reached.

Microphone Control:

- XLR & ¼" Ports (Mic 1 and Mic 2):
 - Except XLR and ¼" microphones/instrument inputs.
- Gain Knob (Mic 1 and Mic 2):
 - Rotate the gain knob clockwise to increase or counter-clockwise to decrease the level on each channel.
- Echo Effect Knob (Mic 1 and Mic 2):
 - Rotate the echo knob clockwise to increase or counter-clockwise to decrease the level on each channel.

Previous & Next (arrow) Buttons:

- FM radio source controls:
 - LED display FM indicator icon will light up in FM mode.
 - Short press the previous or next button to adjust the FM radio frequency shown on LED display.
 - Long press the previous or next button to search for radio stations.
- Bluetooth® source controls:
 - LED display BT indicator icon will light up in Bluetooth® mode.
 - The previous/next buttons will change the audio track.
- USB source controls:
 - LED display USB indicator icon will light up in USB mode.
 - The previous/next buttons will change the audio track.

REPEAT Button:

- This function is only available though the USB mode. Short press the REPEAT button to select one of three status settings:
 - Repeat ALL (tracks). "ALL" will be shown on the LED display.
 - Repeat ONE (track). "ONE" will be shown on the LED display.
 - Repeat OFF. "OFF" will be shown on the LED display.

SOURCE Button:

- Short press the SOURCE button to cycle though the different audio sources:
 - BT (Bluetooth®) --> AUX --> FM (radio) --> USB

BASS Button:

- Press the button to turn on/off the BASS (boost). The LED will display "b on" or "b off."

XLR Out:

- While in audio sources: AUX-in, BT (Bluetooth®), FM radio, or USB, connect the unit to another active (powered) speaker via the XLR line out.

TWS Button (True Wireless Dual Pairing):

- TWS pairing (make sure both unit A and B are in close proximity to each other):
 - Long press the TWS button to enter into pairing status. The Bluetooth® indicator LED will alternate flashing blue and red.
 - Press and hold the TWS button of unit A to enter TWS searching mode while unit B is set to Bluetooth® pairing mode.
 - The unit A (TX) Bluetooth® indicator LED will light up purple when connected, while the indicator LED for unit B (RX) will be solid red. The unit voice prompt will say, "Synchronized."
- Disconnect TWS:
 - Long press the TWS button.
- Additional unit purchase is required

BASS/TREBLE Buttons:

- Bass adjustment in working mode:
 - Press the BASS/TREBLE button once to enter bass level status.
 - The LED display will show the default setting of "b 00."
 - Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease levels between -06 to 06.
- Treble adjustment in working mode:
 - Short press the BASS/TREBLE button twice to enter treble level status.
 - The LED display will show the default setting of "t 00."
 - Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease levels between -06 to 06.

1-5 Number Button:

- Equalizer presets available in BT (Bluetooth®), AUX, USB audio sources.
 - Short press a number (1-5) button to set the preset. The LED display will show the selected equalizer setting: "Eq-1, Eq-2, . . . Eq-5."
- Save and select FM Radio station presets.
 - Short press a number (1-5) button to set the preset station. The LED display will show the selected preset: "P1, P2, . . . P5."
 - Long press a number (1-5) button to save an FM radio station as a preset. The LED display will show the saved preset: "P1, P2, . . . P5."
- When recording audio from Microphone
 - Long press button number 3 for 3 seconds to enter to recording mode.
 - Short press button number 3 to exit the recording mode.

Recorder play / Battery button:

- To playback, long press recorder play / battery button for 3 seconds
Play the last recording file once. If User want to play another recording file, press the Prev/Next button or Play key to switch track number). To exit playback mode, short press to recorder play / battery button.
- Short press battery button to show battery level.

LCD display UI:

- Start Up Page



- Main Page



- Background



LCD display BLUETOOTH key UI:

• Bluetooth Playback



 
Adjust the arrow button to select the BLUETOOTH key on the LCD display.



• Bluetooth Pairing




Long press the OK button for 3 seconds, the Unit will enter the pairing mode.
(See page 5 for more info)

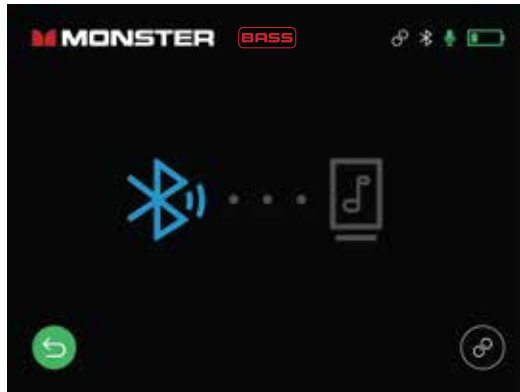

• Bluetooth Pause Playback




 Choose the BT icon (⌘), and press the OK button one time to Play/Pause the music.

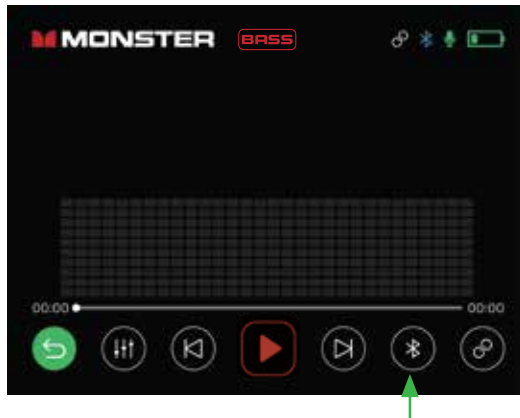

LCD display UI:

 
- Bluetooth Playback without ID3 info

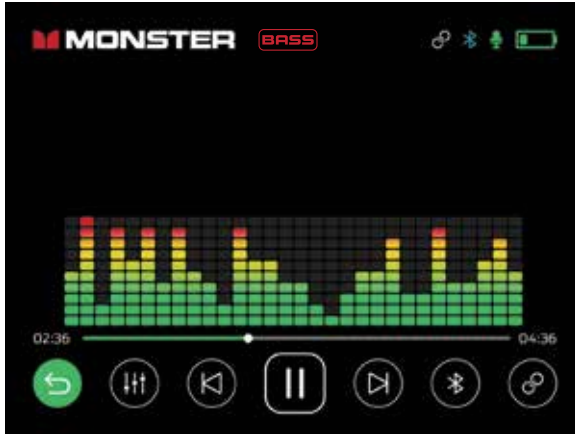

- TWS TX Playback




 - TWS Pause Playback

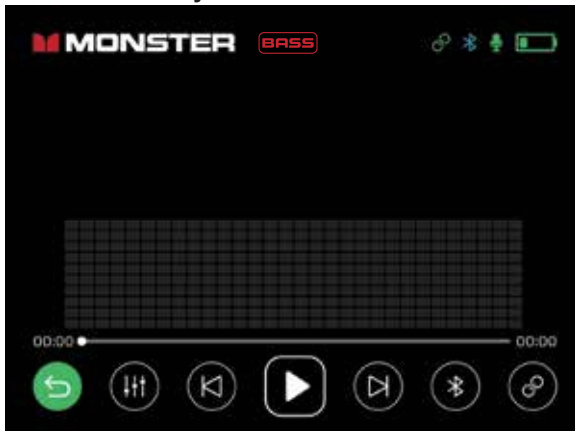

LCD display UI:

 
- Bluetooth RX Playback

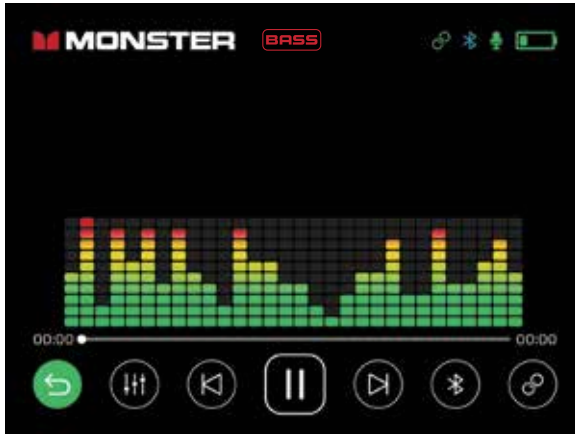

- USB Playback




 - USB Reading Music

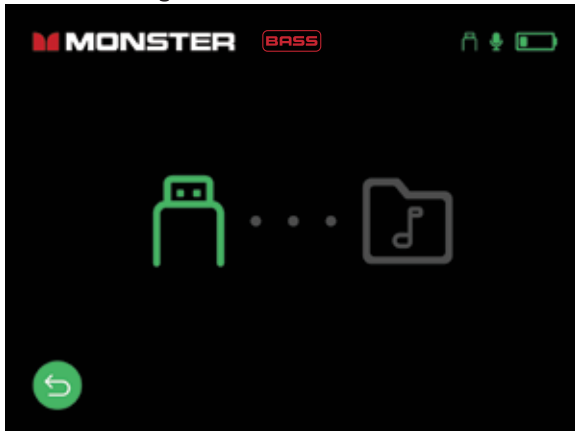


LCD display UI:

 
- USB Pause Playback

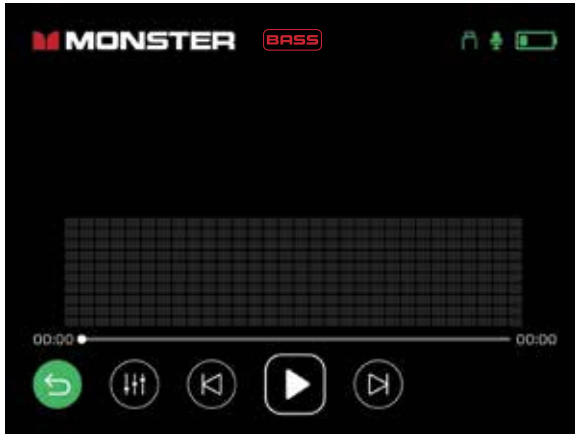

- USB Playback without ID3 info

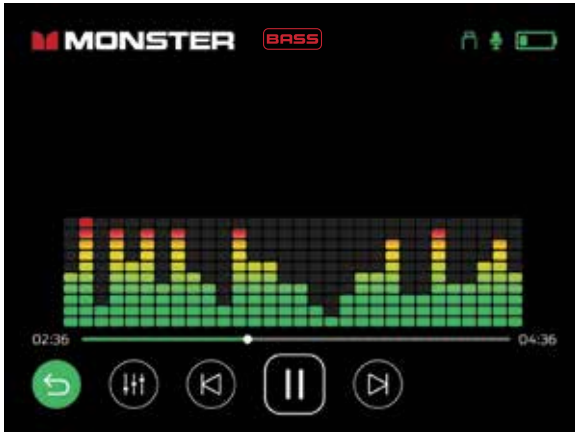 


- USB Recording

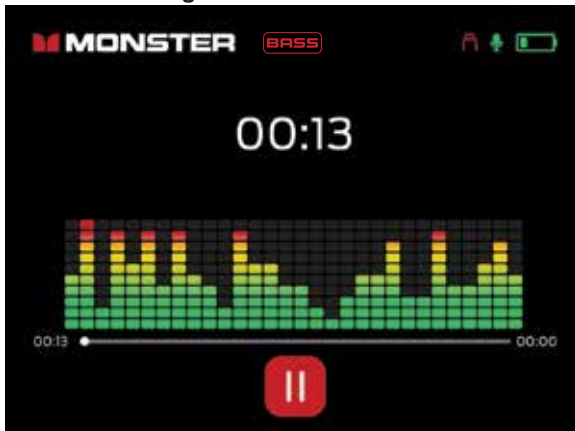 

LCD display UI:

 
- USB Reading Record

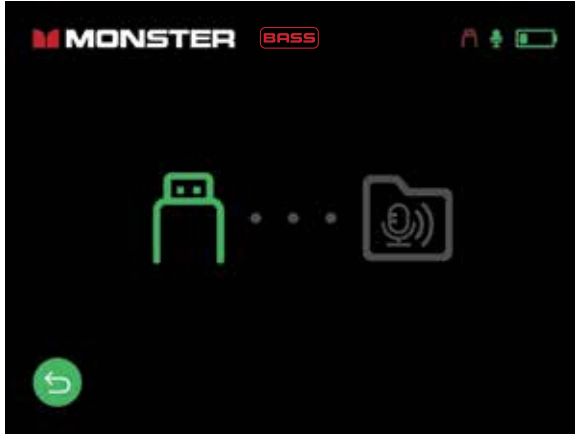

- USB Record Playback




 - AUX Playback

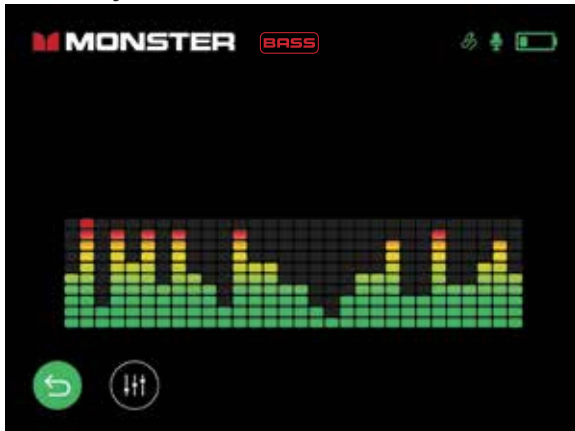


LCD display UI:

 
- AUX Pause Playback

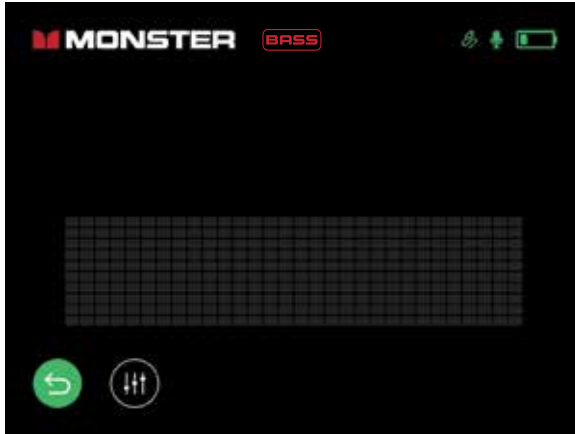

- FM Page

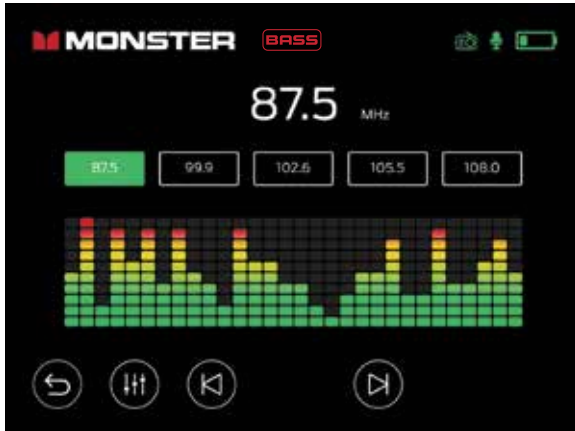 

- EQ Page

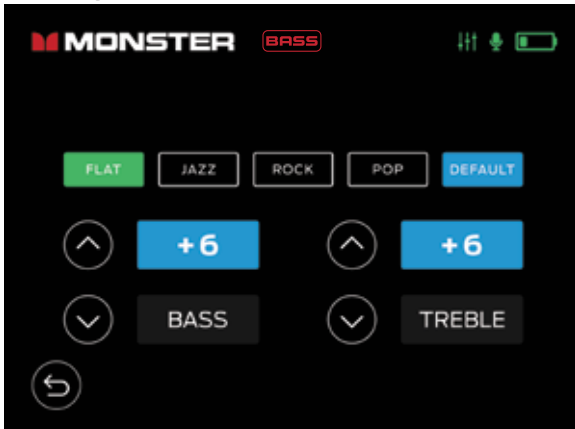 

LIGHTING Button:

- Short press the LIGHTING button to cycle through the 15 available light modes. The LED display will indicate mode number: "L01 L02 L03 ..OFF".
- Light modes included:
SPIN->DANCE->SWIRL->BREATH->FOLLOW->SPARK->SUNSET->MOOD->PACE->RED->GREEN->BLUE->AMBER->PURPLE->TEAL->OFF
- **NOTE:** Only the following modes work with the FM Radio audio sources:
RED->GREEN-> BLUE->AMBER->PURPLE->TEAL-> OFF
- Long press the LIGHTING button to turn off the RGB LED lights.

Lighting / BASS BOOST Key on front panel:

- Press and hold the Lighting/BASS BOOST key on the front for 3 seconds to activate Bass Boost.

Technical Specs:

- 1000 Watts Max of Audio Power
- Sub-woofer: 15" (inch)
- Bluetooth® 5.3
- Audio File Supported: .mp3
- Frequency Response: 40Hz-20KHz
- Tweeter: 1.5" (inch)
- AC Power 100-240 Volt
- THD + Noise: ≤10%
- S/N Ratio: >70dB
- SPL: 110dB±10%
- RGB LED Lights
- Product Dimensions (L x D x H) Inches: 20.9" x 14.9" x 30.8"



Operating ambient temperature: 0 - 45°C,
Storage and transportation ambient temperature: -10 - 50°C,
altitude not higher than 2000m (air pressure not less than 80kPa),

WARNING:

- Replacement of a battery with an incorrect type may defeat a safeguard;
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

CAUTION

Risk of fire or explosion if the battery is replaced by an incorrect type!

DISPUTES

Model: MNRRX

ALL DISPUTES ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY.

Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action.

The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted by the American Arbitration Association (AAA) pursuant to its Consumer Arbitration Rules (AAA Rules). The Federal Arbitration Act governs this provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and Russell Distribution Company, LLC shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA Rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims by you, the purchaser of the Product, and all those in privity with you, including your family members, beneficiaries and assigns, against Russell Distribution Company, LLC's parent(s), subsidiaries and allies, any person or entity that licensed, supplied, sold or distributed the Product, and each of their officers, employees, representatives, licensors/licensees, agents, beneficiaries, predecessors in interest, successors, and/or assigns.

You may opt out of this dispute resolution procedure by providing notice to Russell Distribution Company, LLC no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to Russell Distribution Company, LLC at support@mymonsteraudio.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number if applicable, if you have it. Alternatively, you may opt out by calling 1-800-976-0677 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

**To obtain warranty service,
please contact technical support with questions**

Email: support@mymonsteraudio.com

Do not return this product to the store. Visit: MyMonsterAudio.com

Limited Warranty

Model: MNRXR

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. The Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

For Customer Service, please visit our website: mymonsteraudio.com



MONSTER®

Distributed by Russell Distribution Company, LLC
7801 Hayvenhurst Avenue
Los Angeles, CA 91406

www.mymonsteraudio.com

Monster and the Monster logo are registered trademark of Monster, Inc. and its subsidiaries in the U.S. and other countries, used under license.

The Bluetooth® word mark and logos are registered trademark owned by Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

Model#MNRRX

Made in China

Rv240816